

Motion Control Operation



Motion Control

Use Simple Hand Gestures to Control the Radio

Easily perform most often used functions such as play/pause, volume up/down and track forward/backwards using simple hand gestures.

In Tuner mode

Swipe your hand up across the sensor to increase the volume.

Swipe your hand down across the sensor to decrease the volume.

Swipe your hand right across the sensor to seek up and tune to the next strong station.

Swipe your hand left across the sensor to seek down and tune to the next strong station.

Put your hand over the sensor to mute the audio.

In CD, USB and iPod mode

Swipe your hand up across the sensor to increase the volume.

Swipe your hand down across the sensor to decrease the volume.

Swipe your hand right across the sensor to skip to the next track.

Swipe your hand left across the sensor to return to the beginning of the previous track.

Put your hand over the sensor to pause/play the track.

Note : The motion control feature may not work properly with a large USB flash drive or a USB cable inserted. A low profile USB flash drive is recommended.