

Steering Wheel Control(SWC) Operation

In Home screen, press SWC icon to enter SWC settings. It will show as below.

Description

1. Saved functions
2. Steering wheel input (voltage)
3. Functions
4. Map the function to the steering wheel control
5. Save the function to the steering wheel control
6. Reset to default
7. High voltage steering wheel input
8. Low voltage steering wheel input




Steering Wheel learning Process

Before learning, press to reset RESET icon to remove any previous settings.

1. Input a steering wheel key. The voltage will show as on the description #2 above.
2. Tap the ASSIGN icon as shown on the description #4 above, tap #2 to select key then tap the function as shown on the description #3 above to map the steering wheel key.
3. Tap the CONFIRM icon as shown on the description #5 above to save the settings.

SWC Connecting Wires

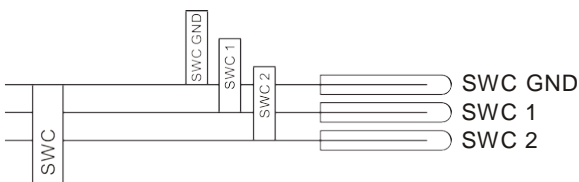


APPLICABLE VEHICLES

Make	Connector	SWC1	SWC2	SWC-GND	APPLICABLE VEHICLES
Chevy/Buick/Olds/Pontiac	A	A6	N/A	A7	2004-12 Acura
Ford/Lincoln/Mercury	B	18	N/A	19	2004-09 Buick
	C	14	N/A	RG*	2000-08 Chevrolet
Honda/Acura	D	7	N/A	6	2004-12 Ford*
	E	3	N/A	RG*	2003-12 Honda
	F	16	N/A	5	2006-13 Hyundai
Kia/Hyundai	G	18	N/A	19	2006-13 Kia
	H	6	N/A	18	2003-12 Lexus
	I	4	N/A	17	2003-11 Lincoln
	J	5	N/A	6	2003-12 Mazda
Mazda	K	6	N/A	5	2003-11 Mercury
		6	N/A	5	2005-11 Nissan
		6	N/A	5	2002-04 Oldsmobile
		6	N/A	5	2001-08 Pontiac
		6	N/A	5	2004-12 Scion
Nissan	L	16	6	15	2003-13 Toyota
	M	75	74	76	
	N	70	69	71	
	O	23	22	25	
	P	22	21	23	
	Q	13	12	14	
Toyota/Scion/Lexus	S	7	8	6	
		*RG = Ground wire from the radio harness			

IMPORTANT

This unit only works with analog steering wheel controls. Does not support any data-bus system.

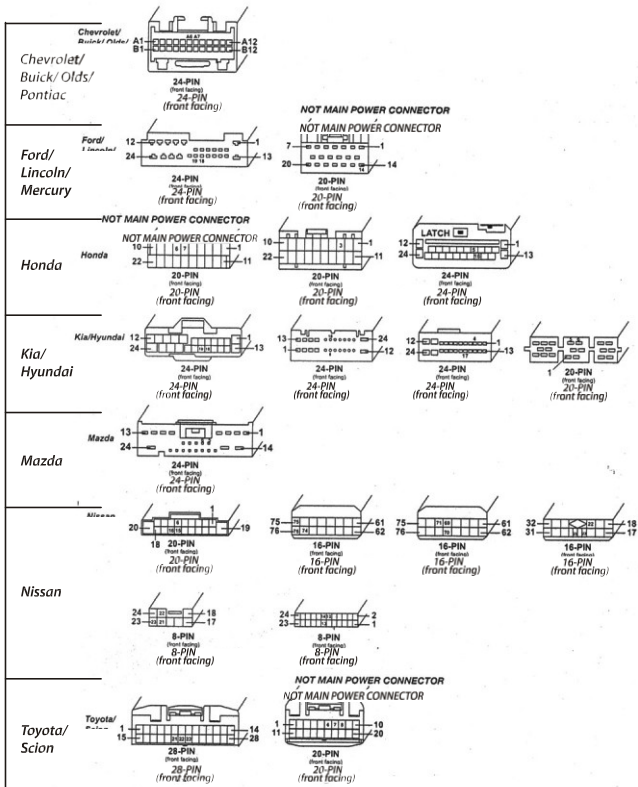

Note. According to vehicle type, please change the IMPEDANCE setting from GENERAL menu if the steering wheel control does not work.