


# Steering Wheel Interface(SWI) Operation

## SETTING

In the event of the interface, you can set the function value of the button, touch the N/A area will pop-up the value, touch the button up or down to search the function value. When the selected value to touch it determine the value by the button; You can set the unit's system a total of six buttons, there are ten optional functions: VOL-/VOL+ (volume adjustment), CH-/CH+ (TV channel scan), SEEK-/SEEK+ (manual fine-tuning(short press)/scan channels(long press)), MUTE, MODE, POWER, Talk; Will be set after the button above. Pressing [return] icon after setting. As shown below:

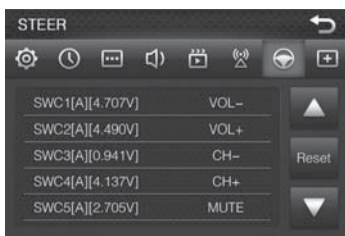


## RESET


From the point we can see, setting up five buttons, set the VOL+, VOL-, CH+, CH-, MODE five functions according to individual needs, set the button's function corresponding value. When the need to re-set button on the steering wheel controller efunction value, touch [RESET] button to life the value of the button's function, then repeat the above steps, re-set the desired fuction value.

## SWI Wiring Diagram

### Single-wire analog steering wheel controller

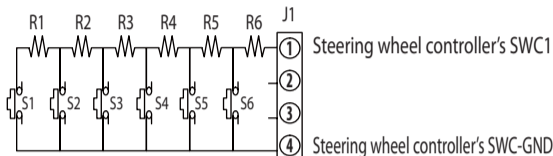

### Double-wire analog steering wheel controller

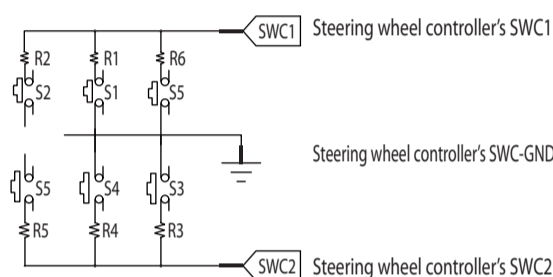


## APPLICABLE VEHICLES

Make	Connector	SWC1	SWC2	SWC-GND	APPLICABLE VEHICLES
Chevy/Buick/Olds/Pontiac	A	A6	N/A	A7	2004-12 Acura
Ford/Lincoln/Mercury	B	18	N/A	19	2004-09 Buick
	C	14	N/A	RG*	2000-08 Chevrolet
Honda/Acura	D	7	N/A	6	2004-12 Ford*
	E	3	N/A	RG*	2003-12 Honda
	F	16	N/A	5	2006-13 Hyundai
Kia/Hyundai	G	18	N/A	19	2006-13 Kia
	H	6	N/A	18	2003-12 Lexus
	I	4	N/A	17	2003-11 Lincoln
	J	5	N/A	6	2003-12 Mazda
Mazda	K	6	N/A	5	2003-11 Mercury
	L	16	6	15	2005-11 Nissan
Nissan	M	75	74	76	2002-04 Oldsmobile
	N	70	69	71	2001-08 Pontiac
	O	23	22	25	2004-12 Scion
	P	22	21	23	2003-13 Toyota
	Q	13	12	14	*2012 Ford F-150 Not compatible
Toyota/Scion/Lexus	R	21	22	23	
	S	7	8	6	

\*RG = Ground wire from the radio harness

## IMPORTANT

This unit only works with analog steering wheel controls. Does not support any data-bus system.

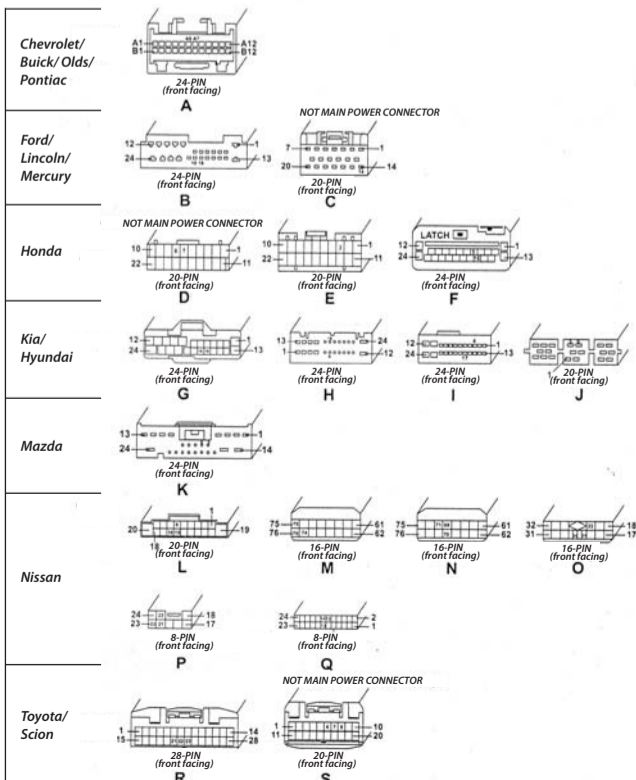

Note. According to vehicle type, please change the IMPEDANCE setting from GENERAL menu if the steering wheel control does not work.