AV7336MB

QUICK START GUIDE

Multimedia DVD Receiver with 2-Way DualMirror™ Technology and Bluetooth featuring a 7" digital TFT LCD
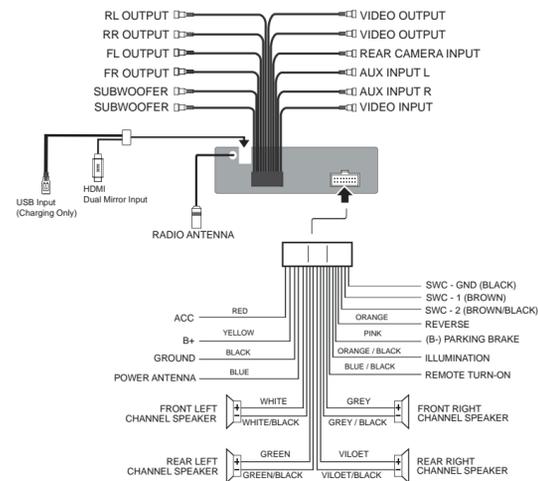
This Quick Start Guide gives you the basics to start using your AV7336MB. Please visit www.axxeraaudio.com/support/manuals.php to download a complete owner's manual or call customer service at 1-866-382-5476 (Monday-Friday, 9AM-5PM EST). Or email at CS @ dualav.com

axxera™

Customer Service Toll Free: 1-866-382-5476

Safety Notes:
The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.

Installation

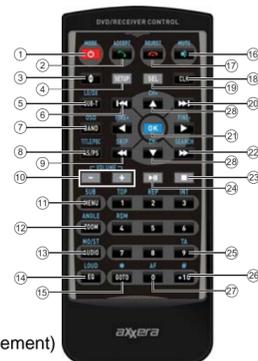

TYPICAL FRONT-LOAD DIN MOUNTING METHOD

SLIDE BRACKET HOUSING
KEY PLATE
KEY PLATE
PLASTIC TRIM

Wiring Diagram

RL OUTPUT — VIDEO OUTPUT
RR OUTPUT — VIDEO OUTPUT
FL OUTPUT — REAR CAMERA INPUT
FR OUTPUT — AUX INPUT L
SUBWOOFER — AUX INPUT R
SUBWOOFER — VIDEO INPUT

USB Input (Charging Only)
HDMI Dual Mirror Input
RADIO ANTENNA

ACC — RED
B+ — YELLOW
GROUND — BLACK
POWER ANTENNA — BLUE

ORANGE — SWC - GND (BLACK)
PINK — SWC - 1 (BROWN)
ORANGE / BLACK — SWC - 2 (BROWN/BLACK)
BLUE / BLACK — REVERSE
— (B-) PARKING BRAKE
— ILLUMINATION
— REMOTE TURN-ON

FRONT LEFT CHANNEL SPEAKER — WHITE / WHITE/BLACK
FRONT RIGHT CHANNEL SPEAKER — GREY / GREY / BLACK
REAR LEFT CHANNEL SPEAKER — GREEN / GREEN/BLACK
REAR RIGHT CHANNEL SPEAKER — VILOET / VILOET/BLACK

Front Panel Controls

1. Eject
2. Release
3. IR
4. MIC
5. USB
6. AUX IN
7. Mute/End call
8. Tune/Previous Track/Back
9. Volume Up/Down
10. Mode
11. Power
12. Play/Pause/Band
13. Open
14. Tune/Next Track/Forward
15. Talk

Remote Control

1. Power & Mode
2. Talk
3. Adjust angle
4. Setup
5. Subtitle & Local/Dx(Distant)
6. Tune/Previous Track
7. Band
8. Title/PBC (Push Button Configuration) &AS/PS(Automatic Memory stroring & Preset Scanning)
9. Back
10. Volume Up/Down
11. Menu & Subwoofer
12. Angle & Zoom
13. Audio & MO(Mono) /ST(Stereo)
14. EQ(Equalizer) Loud(ness)
15. Goto & *
16. Mute
17. END & Reject
18. Clock
19. SEL(Select)
20. Tune/Next Track
21. OK
22. Forward
23. Stop
24. Play/Pause
25. 9/TA (Traffic Announcement)
26. +10/#
27. 0/AF(Alterative Frequencies)
28. CH+/CH-(TV Tuner models only)

Main Menu

In the Main Menu screen, press the desired icon to enter each of the following settings : Radio, Disc (CD/DVD), USB, SD Card, Bluetooth Phone, Bluetooth Music, Dual Mirror, Rear-view Camera, Aux In, AV In, Setup

Setup Operations

In the Main Menu, press Setup icon to enter the general settings for the device

1. General(Animation, Key Beep, Disc, Radio,....)
2. Time(Adjust Time and Time format)
3. Video(Adjust Color, Brightness, Contrast, Tint)
4. Language(Select Language)
5. RGB Illumination(Backlight and Buttons color)
6. Calibration(TFT Calibration)

Radio Operations

Press MODE button on the Control Panel until Tuner is selected

1. Home
2. Information Display
3. Tune Up
4. Preset Station Display
5. Next Menu
6. BAND
7. AS/PS(Automatic Memory Storing & Preset Scanning)
8. Audio Setup
9. Mute
10. Previous Menu
11. Tune Down
12. Local/Dx(Distant)
13. TILT Angle Up
14. TILT Angle Down
15. PTY(Program type)

DVD Operations

Insert a DVD in the disc slot for DVD playback(please see 'Safety Notes' on the front page of this guide)

1. Mute
2. Previous Track
3. Play/Pause
4. Next Track
5. Back
6. Forward
7. Next Menu
8. Repeat Play
9. Random Play
10. TILT Angle Up
11. TILT Angle Down
12. Talk
13. TA(Traffic Announcement)
14. AF(Alterative Frequencies)
15. Previous Menu

DISC Operations

Inserting the MP3 CD into the disc slot will make the unit automatically read the CD.

1. Previous Menu
2. Mute
3. Audio Setup
4. Back
5. Forward
6. Next Menu

Audio Settings

Audio EQ Presets
USER -> JAZZ -> CLASSIC -> POP
ROCK -> BEAT -> FLAT
USER PRESET
6 EQ Band frequencies are adjustable from the ASP settings.
ASP menu adjust the Bass/Mid/Treb center frequencies. Each band adjusts the center frequency average(Low/Mid/High).
Bass/Mid/Treb Q Value adjust the frequency width, wide to narrow.
Loudness center frequency(Flat, 400, 800, 2400)
Subwoofer center frequency(Flat, 80, 120, 160)

FADER/BALANCE
FAD (F10 to R10): Fader adjusts the front-to-rear audio strength
BAL (L10 to R10): Balance adjusts the left-to-right audio strength

SUB/LOUD
SUB:Adjusts the subwoofer volume levels.
LOUD(Off/Low/High):Loudness feature provides better overall sound at low volume levels by increasing low and high frequencies

Bluetooth Operations

Bluetooth Microphone
The microphone is built-in to the receiver

Pairing and Connecting
Before useing a Bluetooth device with this unit, the device must be paired and connected. The Bluetooth signal of the unit will broadcast when the power is on. Complete the pairing sequence from your Bluetooth device. The Dual unit will be displayed as "Dual BT". When prompted, enter the passcode "0000". On your device. Once paired, the Bluetooth device should automatically connect this unit whenever the unit is in range.

Dialing a Number
Press ⌨ to display keypad and dial a number.
Making and Ending a Call
Press 📞 to make a call, and press 📵 to end a call.
Accessing Recent Call List
Press 📋 to view the Dialed
Press 📋 to view the Received
Press 📋 to view the Missed
Transfering Audio
Press 🔊 to transfer audio between the head unit and mobile phone.
Streaming Audio
Press 🎵 to enter the music control menu.
Press ▶ to play or pause the music.
Press ◀ to skip to the previous track.
Press ▶ to advance to the next track.

2-Way DualMirror™ Operation

See insert for DualMirror operation.

Steering Wheel Control(SWC) Operation

Steering Wheel Control Programming
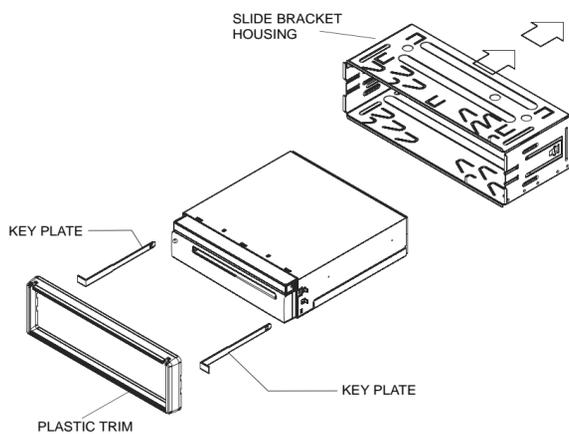See insert for SWC Programming operation

One-Year Limited Warranty

FCC Compliance